



USER MANUAL

IMPORTANT SAFETY INSTRUCTIONS

This electrical appliance must always be used according to the following safety instructions. Save these instructions as this manual contains important safety and operating information. When using an electrical appliance, basic precaution should always be followed, including the following:

READ ALL INSTRUCTIONS CAREFULLY BEFORE USING THIS APPLIANCE:

To reduce the risk of fire, electric shock or injury:

1. Always depress the Vacuum Power Button on the bottom of the unit to the OFF position, and the Trash Bin Power Button on the top of the unit to the OFF position before unplugging the EyeVac+.
2. Always unplug the appliance before cleaning or servicing it. Do not unplug by pulling the cord; to unplug, grasp the plug, not the cord.
3. Do not let the EyeVac + be used as a toy. Close attention is necessary when used near children. Do not use in AUTO Mode or leave appliance plugged in near children, infants or small animals.
4. Do not pull or carry the appliance by the cord. Do not run the appliance over the cord, close a door on the cord, or pull the cord around sharp edges or corners. Keep the cord away from heated surfaces.
5. Do not use the appliance if the cord or plug is damaged.
6. Do not handle the plug or appliance with wet hands.
7. Do not use appliance on wet surfaces.
8. Do not expose to rain.
9. Do not use appliance to dispose of water or damp materials such as mud, tile grout, plaster filler, or caulking. Do not use to pick up any liquid or wet objects.
10. Do not use appliance to vacuum up flammable or combustible liquids, such as gasoline. Do not use in areas where these liquids may be present.
11. Do not use this appliance to vacuum up burning or smoking materials, such as cigarettes, matches or hot ashes.
12. Keep hair, loose clothing, and all parts of the body, especially fingers, away from openings and moving parts.
13. Do not put any objects into appliance openings or use with any openings blocked or plugged.
14. Do not use this appliance to pick up hard or sharp objects or other large surface litter. Pick these up by hand before vacuuming.
15. Do not operate without the Lid and Filters properly in place.
16. Use the appliance only as described in this Use and Care Guide.
17. Turn appliance OFF (both power buttons) before removing or replacing the Canister or Filter.
18. Unplug appliance before cleaning or maintenance.
19. If the appliance is not working as it should, call for instructions where to send for repair. Do not attempt to repair, as it will invalidate your warranty.
20. When cleaning the outside of the appliance, wipe with a damp cloth to reduce the static electricity on the outer surface.

WARNING! To reduce the risk of electric shock, do not use on wet surfaces. Do not expose to rain. Store indoors.

DESCRIPTION OF EYEVAC + SAVE THESE INSTRUCTIONS FOR HOUSEHOLD USE ONLY



1. Canister Lid

2. Pre-Motor Filter

3. Vacuum Canister

4. Serial Number

(located on back of unit)

5. Sensor- Trash Bin

6. Inlet

7. Sensor - Vacuum

8. Vacuum Manual Activation Button

9. Vacuum Power Button

10. Vacuum Auto Mode

11. Vacuum Manual Mode

12. Vacuum Canister Full Indicator

13. Exhaust Filter Housing

14. Exhaust Filter

(not shown, located on back of unit)

15. Trash Bin Lid

16. Trash Bin Lid Power Button


BEFORE USING FOR THE FIRST TIME

1. Remove EyeVac + from packaging and set upright on any non-carpeted flooring.
2. Plug unit into any standard 120V(US) AC electrical outlet.


NOTE: EYEVAC + CANNOT BE USED WITH A CONVERTER OR ADAPTER

3. Depress the Vacuum Power Button to the MAN position for manual operation or to the AUTO position for automated use. The Power Indicator Light will illuminate when the Power Button is in either of these positions. Switch the Trash Bin Lid Power Button to the On position. Your EyeVac + is now ready for use.

Replace Trash Bags

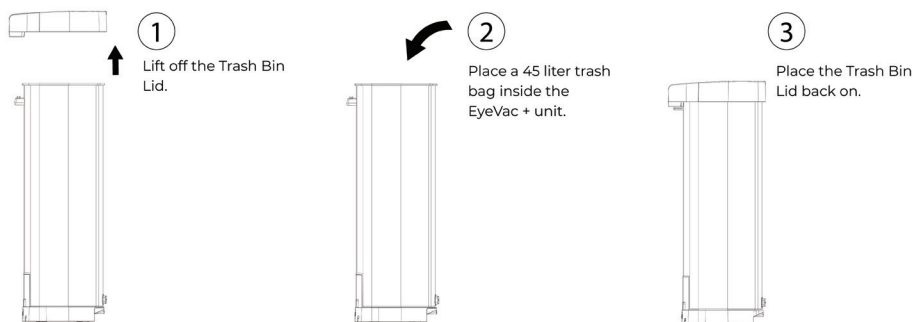

Opening the Lid Top

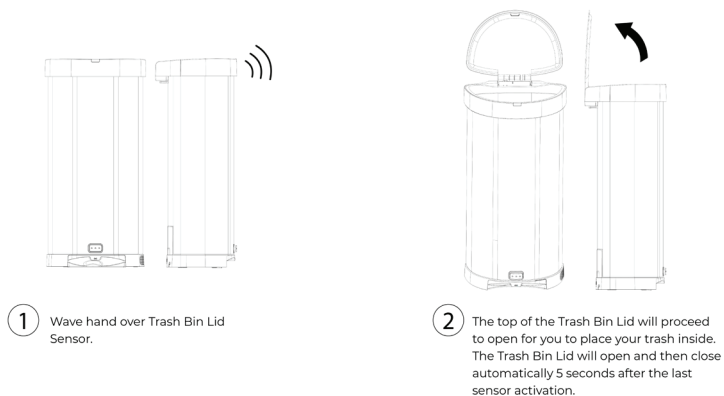

** To keep the Trash Bin Lid open, wave your hand in front of the Trash Bin Lid Sensor for 3 seconds. The Trash Bin Lid will open and remain open. To close and return to normal operation, wave your hand in front of the Trash Bin Lid Sensor for 3 seconds.

OPERATING VACUUM FEATURE

NOTE: EYEVAC + cannot operate when the Power Button is in the OFF position.



1. Open the Canister and ensure the Pre-Motor Filter is aligned properly and into place. Then re-insert the Canister. The unit will NOT operate if the Canister is not inserted properly.



2. Plug in your EyeVac + in the desired location.



3. Depress the Vacuum Power Button to the on position (button located on bottom front of unit). Unit will be in Automatic Mode. Depress the Vacuum Power Button again to select Manual Mode.



4. When ready simply sweep debris over to the unit if in Automatic Mode the Vacuum Sensors will detect your motion. If in Manual Mode simply tap the Button located on the front bottom of the unit and the vacuum will activate.



5. As debris accumulates, the Canister will need to be emptied. The Canister Full indicator illuminates to let you know when it's time to empty the Canister.

USER MAINTENANCE INSTRUCTIONS

1. To empty the EyeVac+ Canister, press the Vacuum Power Button to the OFF position, press the Trash Bin Lid Power Button to the OFF position, and unplug the unit.
2. Pull the Canister outward from the bottom of the Bin Cavity. Grasp the Canister Grip firmly and lift it out and away from the EyeVac + Main Unit.
3. Holding the Canister firmly with one hand, grasp the Canister Lid Handle with the other hand and pull the Lid straight up and out to remove.
4. Turn the Canister upside down over a trash can. Make sure you empty all dirt and debris from inside and below the Bin. To ensure that all the dirt spills out, tap the side of the Canister gently against the edge of the trash can. Re-attach the Canister Lid to the top of the Canister.
5. Clean Sensors, Dirt Inlet area, Canister, Canister Lid and Canister Cavity with a damp rag or towel. Do not use soap or alcohol to clean sensors.
6. After all parts are fully dried, insert the assembled Canister with Lid fitted snugly into position and Pre-Motor Filter locked into place. The 2 grooves in the bottom of the Bin fit easily over the rod in the front of the unit. Grasp the Canister grip and lock the Canister back into position.

NOTE: Make sure all parts are completely dry before reassembly.

HEALTH TIP: If you suffer from allergies or asthma, take the Canister outdoors to empty. As you empty the dirt into the trash can, gently tap the Canister against the side of the can to remove loose debris.

CLEANING THE PRE-MOTOR FILTER

To maintain optimal performance, the Pre-Motor Filter will need cleaning whenever the suction is not strong. The Pre-Motor Filter must be clean and free of elements, which might hinder the flow of air.

1. To empty the EyeVac+ Canister, press the Vacuum Power Button to the OFF position, press the Trash Bin Lid Power Button to the OFF position, and unplug the unit.
2. Pull the Canister outward from the front of the Bin Cavity. Grasp the Canister grip firmly and lift it out and away from the EyeVac + Main Unit. Locate the Pre-Motor Filter Handle.
3. Remove the Pre-Motor Filter by grasping the Filter Handle and turn counter-clockwise to the unlock position. Pull Filter straight up and out of the top of the Canister. Rinse under running water to clean. If needed a mild soap and soft bristled brush can also be used.

IMPORTANT! Dry thoroughly before use.

4. Slide the Pre-Motor Filter back into the top of the Canister. Rotate clockwise to the "lock" position. Put the Canister back into place.
5. If a new Filter is needed, replace with standard filter cartridges. Make sure that it fits snugly in the Filter Holder. Replacement Filters are available through the Customer Service Department.

IMPORTANT! NEVER OPERATE THE EYEVAC + WITHOUT THE PRE-MOTOR FILTER PROPERLY IN PLACE.

CLEANING THE EXHAUST FILTER HOLDER

1. To clean the Exhaust Filter Holder, press the Vacuum Power Button to the OFF position, press the Trash Bin Lid Power Button to the OFF position, and unplug the unit.
2. The Exhaust Filter Holder slides up and out of its housing on the side of the unit.
3. Gently pull the Filter out of the Filter Holder.
4. Tap Filter gently against trash container to free and eliminate excess dirt and debris.
5. To clean the Filter, wash in mild soap and water; rinse and dry thoroughly before assembly
6. Slide the Holder back into the unit with the Filter facing outwards.

IMPORTANT! NEVER OPERATE EYEVAC + WITHOUT THE EXHAUST FILTER & FILTER HOLDER PROPERLY IN PLACE.

CLEANING THE CANISTER

The Canister should be washed periodically.

1. To clean the EyeVac+ Canister, press the Vacuum Power Button to the OFF position, press the Trash Bin Lid Power Button to the OFF position, and unplug the unit.
2. Wash the Bin in warm water using a mild soap. Avoid harsh or abrasive cleaners or sponges. Rinse thoroughly.

TO AVOID DAMAGE, DO NOT PLACE CANISTER IN THE DISHWASHER.

3. Let it air dry. Make sure the Canister is completely dry before putting it back into the EyeVac +.
4. Insert the assembled Canister following the instructions outlined in the USER MAINTENANCE INSTRUCTIONS.

IMPORTANT! Other than cleaning the Pre-Motor Filter and replacing the Exhaust Filter Holder, as described in this Owner Manual, this EyeVac + is not user serviceable. There are no user serviceable parts inside the unit. Servicing by our Authorized Service Center is required to avoid damage to internal components.

STORAGE

1. To store the EyeVac+ press the Vacuum Power Button to the OFF position, press the Trash Bin Lid Power Button to the OFF position, and unplug the unit.
2. Store EyeVac + indoors, in a clean, dry place.
3. Never store EyeVac + while it is still plugged in. Never wrap cord tightly around the appliance, use the Cord Storage area on the back of the EyeVac + unit. Do not put any stress on the cord where it enters the unit, as it could cause the cord to break.

WARNING! TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT USE OUTDOORS OR ON WET SURFACES.

TROUBLESHOOTING

Problem	Possible cause	Possible Solution
EyeVac + will not turn on/no power	<ol style="list-style-type: none"> 1. Not firmly plugged in 2. Unit is in OFF position 3. Pre-Motor Filter is not in position 4. No power in wall plug 5. Blown house fuse or tripped circuit breaker 	<ol style="list-style-type: none"> 1. Plug in firmly 2. Depress Power Button to MAN or AUTO position 3. Ensure that Pre-Motor Filter is locked and flush with Canister Lid 4. Check house fuse or circuit breaker 5. Have a qualified licensed electrician replace house fuse or reset circuit breaker 6. Remove canister to check switch inside cavity above where premotor filter is positioned
Does not pick up debris	<ol style="list-style-type: none"> 1. Dirt inlet is blocked 2. Container is full 3. Debris may be too large for inlet 	<ol style="list-style-type: none"> 1. Depress Power Button to OFF position 2. Clean path of dirt inlet 3. Empty Canister 4. Clear large debris
EyeVac + sensors do not activate	<ol style="list-style-type: none"> 1. Unit is not in AUTO mode 2. Ensure Trash Bin Lid Power Button is ON 	<ol style="list-style-type: none"> 1. Depress Vacuum Power Button to AUTO position
Suction is not strong	<ol style="list-style-type: none"> 1. Filters may be dirty 	<ol style="list-style-type: none"> 1. Depress Vacuum Power Button to OFF position 2. Clean Pre-Motor or Exhaust Filters when needed
Status indicator light blinking	<ol style="list-style-type: none"> 1. EyeVac + sensors have been shut off for 30 seconds which caused power to the motor to be shut off 	<ol style="list-style-type: none"> 1. Depress Power Button to the OFF position 2. Check Pre-Motor Filter and Exhaust Filter to ensure they are clean. 3. Clean sensors with warm water and Q-tip. DO NOT USE ALCOHOL OR SOAP.
Canister Indicator Light is ON	<ol style="list-style-type: none"> 1. Canister is full 	<ol style="list-style-type: none"> 1. Depress Power Button to the OFF position 2. Empty the Canister 3. Clean all filters
Debris at inlet before unit is powered on		<ol style="list-style-type: none"> 1. Depress Power Button to the MANUAL position 2. Activate unit manually
Lid Top is not opening	<ol style="list-style-type: none"> 1. The EyeVac + is not plugged in. 2. The Trash Bin Power button is not ON. 	<ol style="list-style-type: none"> 1. Make sure the EyeVac + is plugged into a proper outlet 2. Make sure the power button is set to on

CORRECT DISPOSAL OF THIS PRODUCT



This marking indicates that this product should not be disposed with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmentally safe recycling.

This appliance is a dry pick-up, Canister type vacuum cleaner for household and indoor use. Also, it is a general-purpose vacuum cleaner, which can be used for hard floor cleaning.

LIMITED WARRANTY

One-Year Limited Warranty. What is covered: JPauJones, LPTM warrants to the first retail purchaser of this EyeVac + that should this product or any part be proved defective in materials or workmanship from the date of proof of purchase for a period of one (1) year, then it will be subject to the terms of this one-year limited warranty. Such defects will be replaced, or credit issued at JPauJones, LP's option, without charge for parts or labor directly related to the defect. Limitations and Exclusions: This warranty gives you specific legal rights and you may also have other rights which vary from state to state. This warranty does not apply to any cost incurred for removal or re-installation, or to any product or part thereof which has suffered through normal wear and tear, alteration, improper installation, physical abuse, misuse, neglect or accident. Nor does it cover defects caused by shipment to JPauJones, LP or repair or service of the product by anyone other than JPauJones, LP. Damage resulting from an unforeseen circumstance including but not limited to fire, flood, earthquake, and other natural causes will be excluded. This Limited warranty is in lieu of all other warranties, express or implied either in fact or by operations of law, statutory or otherwise, including, but not limited to any implied warranty of merchantability or fitness for a particular use. JPauJones, LP does not authorize any other person to assume any liability beyond the warranty herein described. In no event, whether based in contract or tort shall be liable for incidental, inconsequential, indirect, special or punitive damages of any kind from the use of this product. In no event shall be liable for damage in excess of the purchase price. EyeVac + not for commercial use. For Warranty Service, submit a Service Request at <http://eyevac.com/connect/> or contact: JPauJones, LP, 7500 Rialto Blvd., Bldg. 1, Suite 122, Austin, TX 78735 or call 512-485-3050.

©2014 JPauJones, LP Intellectual Property. All rights reserved, JPauJones, LP, JPauJones, LP logo and all other marks contained herein are trademarks of JPauJones, LP Intellectual Property and/ or JPauJones, LP affiliated companies.

JPauJones™

JPauJones, LP™
7500 Rialto Blvd, Bldg. 1 STE. 122
Austin, TX 78735
(512) 485-3050

For service and general inquiries please visit www.eyevac.com/connect