
EyeVac Reach

User Manual

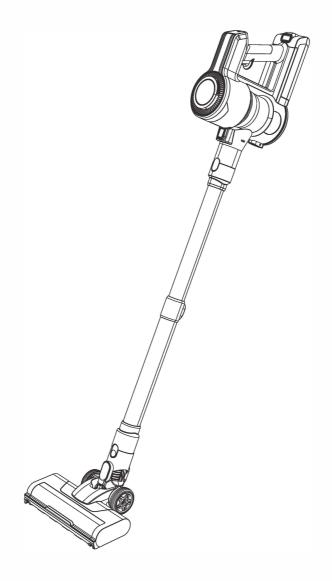

Limited Warranty

One-Year Limited Warranty. What is covered: JPaulJones, LPTM warrants to the first retail purchaser of this vacuum that should this product or any part be proved defective in materials or workmanship from the date of proof of purchase for a period of one (1) year, then it will be subject to the terms of this one-year limited warranty. Such defects will be replaced, or credit issued at JPaulJones, LP's option, without charge for parts or labor directly related to the defect. Limitations and Exclusions: This warranty gives you specific legal rights and you may also have other rights which vary from state to state. This warranty does not apply to any cost incurred for removal or re-installation, or to any product or part thereof which has suffered through normal wear and tear, alteration, improper installation, physical abuse, misuse, neglect or accident. Nor does it cover defects caused by shipment to JPaulJones, LP or repair or service of the product by anyone other than JPaulJones, LP. Damage resulting from an unforeseen circumstance including but not limited to fire, flood, earthquake, and other natural causes will be excluded. This Limited warranty is in lieu of all other warranties, express or implied either in fact or by operations of law, statutory or otherwise, including, but not limited to any implied warranty of merchantability or fitness for a particular use. JPaulJones, LP does not authorize any other person to assume any liability beyond the warranty herein described. In no event, whether based in contract or tort shall be liable for incidental, inconsequential, indirect, special or punitive damages of any kind from the use of this product. In no event shall be liable for damage in excess of the purchase price. EyeVac Reach is not for commercial use. For Warranty Service, submit a Service Request at http://eyevac.com/connect/ or contact: JPaulJones, LP, 7500 Rialto Blvd., Bldg. 1, Suite 122, Austin, TX 78735 or call 512-485-3050. ©2014 JPaulJones, LP Intellectual Property. All rights reserved, JPaulJones, LP, JPaulJones, LP logo and all other marks contained herein are trademarks of JPaulJones, LP Intellectual Property and/or JPaulJones, LP affiliated companies.

JPAULJONES

JPaulJones, LP 7500 Rialto Blvd, Bldg. 1 STE. 122 Austin, TX 78735 (512) 485-3050 For service and general inquiries please visit www.eyevac.com/connect

Table of Contents

ΕN

Important Safety Instructions	• 01
Overview	03
Product Assembly	. 05
Operation	- 06
Maintenance	07
Troubleshooting	· 10

Important Safety Instructions

Basic precautions should always be observed when using any electrical equipment, including the following:

WARNING:

READ ALL SAFETY INSTRUCTIONS AND THE ENTIRE MANUAL. Failure to heed the warnings and instructions may result in electric shock, fire, or serious injuries. Please read all instructions before using this device.

WARNING:

• Do not let the device be used as a toy. Close attention is necessary when used near children. Do not use leave appliance plugged in near children, infants or small animals.

To reduce the risk of injury or damage, please observe the following safety precautions when installing, using and maintaining the device:

- Please read all instructions regarding safety and operation before using the device.
- Keep the safety and user manual for future reference.
- Follow all operating and usage instructions.

Correct Disposal of this Product $\underline{\mathbb{X}}$

This marking indicates that this product should not be disposed with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmentally safe recycling. This appliance is a dry pick-up, Canister type vacuum cleaner for household and indoor use. Also, it is a general-purpose vacuum cleaner, which can be used for hard floor cleaning.

Restrictions

- Please read all contents of this manual carefully before using this product.
- Do not use the Vacuum Cleaner to vacuum detergent, kerosene, glass dregs, needles, wet items, sewage, matches and other items.
- Do not use the Vacuum Cleaner to vacuum toys, paper balls and other large objects, otherwise it will cause blockage of the Vacuum Cleaner, motor burnout and other failures.
- Keep the Vacuum Cleaner away from fire and other hot places.
- Make sure to install the filter modules and the roller brush of the floor brush.
- Make sure not to block the suction inlet or block the roller brush, as this may cause motor failure when using the Vacuum Cleaner.
- Do not pour or spill water or other liquids into the machine to avoid short circuits and burning out the machine.
- Fully charge the battery when using a new battery or the battery used for the first time after long-term storage. Please ensure that it is charged and discharged at least every three months when the machine is not used for a long time.

- The appliance is only to be used with the power supply unit provided with the appliance.
- The plug must be removed from the socket-outlet before cleaning or maintaining the appliance.
- Please do not use or store the Vacuum Cleaner in high temperatures, low temperatures and other adverse conditions, and do not use them outdoors or on wet surfaces. It is recommended to use them indoors at an ambient temperature of 0-30°C. Please store it in a cool and dry place, and do not expose it to sunlight for a long time.
- Do not allow children to use or play with the Vacuum Cleaner.
- When the Vacuum Cleaner can not work, it must be tested and repaired at the designated service center. Do not disassemble the machine by yourself. Waste battery packs should be safely recycled and disposed of, please do not dispose of them at will.
- If the power cord is damaged, in order to avoid danger, you must go to the manufacturer's local maintenance department or similar department to have it replaced by a professional.


FCC Compliance Statement

 
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device,pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: (1) Reorient or relocate the receiving antenna. (2) Increase the separation between the equipment and receiver. (3) Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. (4) Consult the dealer or an experienced radio/ TV technician for help.

Overview

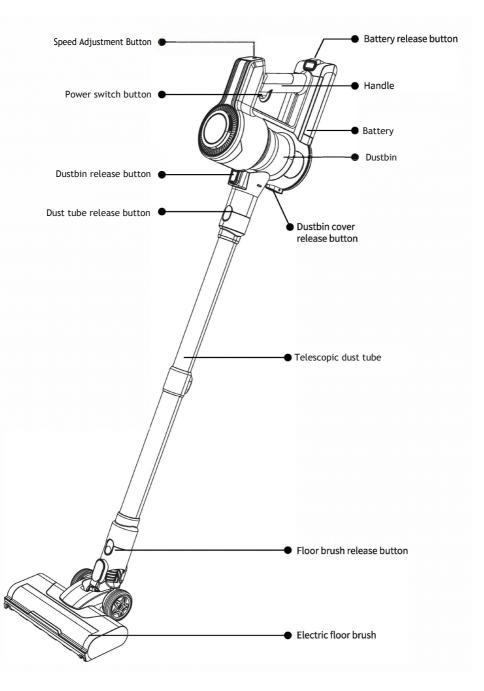



Vacuum Unit

 




Wall mount




Long crevice nozzle

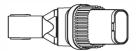


2-in-1 dusting brush

Telescopic dust tube

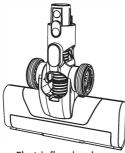

Electric floor brush

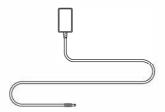 

Power adaptor

Product Assembly

 
1. Battery installation and removal

 
Installation: align the battery with the back-end position of the vacuum unit and slide it in until it is clamped in place.

 
2. Installation and disassembly of the whole machine

Installation: insert the electric floor brush joint at the dust pipe, and the other end of the dust pipe at the vacuum unit when the installation is complete.

Removal: Press the corresponding release button and pull it out to remove the electric floor brush and the host.

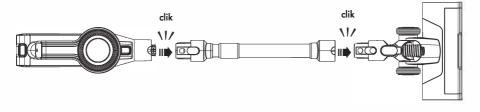

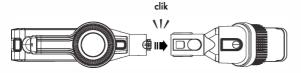

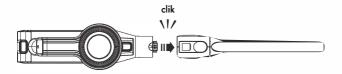

Removal: press the battery release button and pull it out for removal.

Operation

In the process of use, when the display light flashes, it indicates that the power is insufficient, and it needs to be recharged in time so as not to affect the use.

 
Note: please charge with the original power adapter.

Charging:

1. As shown in the picture, the charging plug on the power adapter is inserted into the charging port of the battery and it will be charged. When the charge is displayed as three lights constantly lit indicates full charge.




2. As shown in the picture, after the battery is removed, insert the charging plug into the charging port on the battery, the indicator light is flashing blue, indicating that it is charging; the indicator light is solid, indicating full charge.

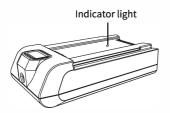


1. Press the switch button and the machine starts working; press the switch button again and the machine shuts down.

2. The machine has two suction gears, short press " 🕺 ", different suction gears can be switched.

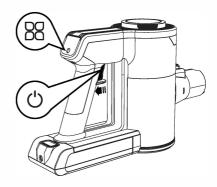

Display screen indications

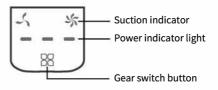 


Maintenance

Cleaning of dustbin


1. Aim the bottom of the dustbin at the garbage can, press the dustbin cover release button, open the dustbin cover automatically, and gently shake it to empty the dust in the dustbin.

Note: Please clean the dustbin after each use to ensure the best cleaning effect.

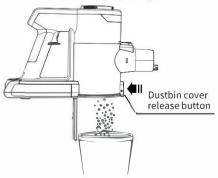

Cleaning of filter components

Press the dust cup release button, and then turn it clockwise as shown in the figure till it cannot move, and then take out the dust cup downward.

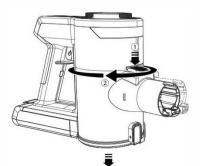




Cleaning of filter components

Note: after rinsing inlet and outlet filters with water, please air dry them before use (do not expose them in the sun).

Note: to maintain the best cleaning performance, it is recommended to clean them once a week.

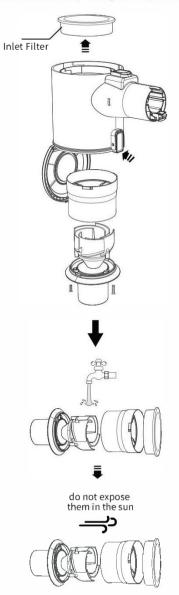

Warning:

- 1.Do not use this machine when filter components are not installed!
- 2. Filter components are prohibited from being used before they are dried completely after flushing.




Cleaning of electric floor brush

1. As shown in the picture, push the lock button down to the unlocked state, and take out one end of the roller brush and pull out the whole brush.


Note: when pulled out, some dust will fall.

2. Remove any hair or debris on the roller brush. If it is washed with water, it must be fully dry before returning to the brush housing.

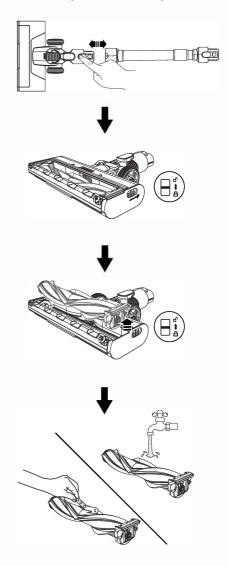

Maintenance

After use, the vacuum can be hung on the wall using the wall mount for convenient storage.

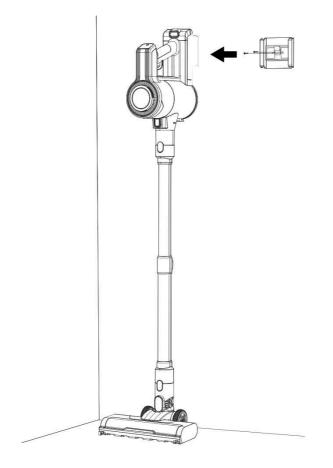

Troubleshooting

Fault	Possible Issues	Solution
The machine cannot be started.	The battery is not installed correctly	Install the battery correctly
	The battery is dead	Charge the battery
Vacuum cleaner has no suction/- suction becomes smaller.	The dustbin is full	Empty the rubbish in the dustbin
	The suction of the dust pipe or floor brush is blocked by a foreign body	Clean up the suction of the dust pipe or floor brush
	Dustbin or filters are not installed correctly	Reinstall the dustbin and filters
	Filter blockage	Clean filters, dry fully and put it back
Dust is leaking from the air outlet.	Filters are not installed correctly	Install filters correctly

Note:

• This vacuum cleaner must be used with the original battery and power adapter.

 \cdot Do not use the battery for any purpose other than this vacuum cleaner.

Specifications

Vacuum Cleaner Specifications

Working Voltage	22.2V
Adapter Rated Input	100-240V~50/60Hz
Adapter Rated Output	26.5V 0.5A

